
# AIR CONDITIONING CONTROL ASSEMBLY (for Manual Air **Conditioning System)**

## **COMPONENTS**

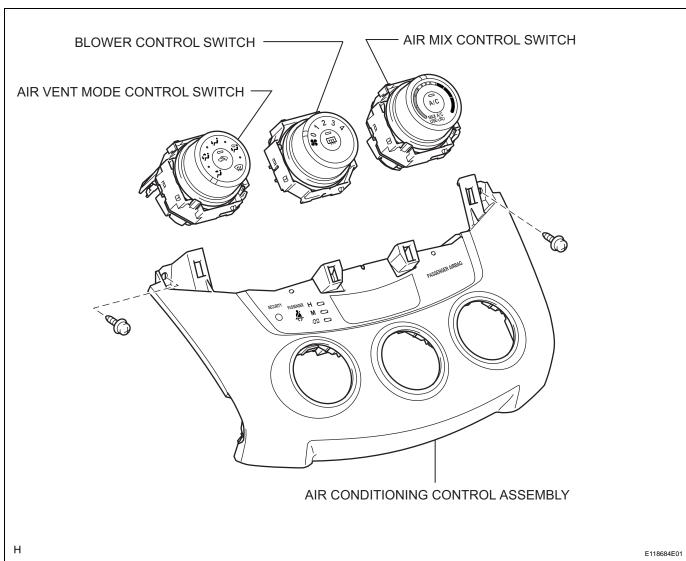

### **REMOVAL**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### NOTICE:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


- 2. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-5)
- 3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-5)
- 4. REMOVE RADIO RECEIVER ASSEMBLY (See page IP-5)



- (a) Remove the 2 screws.
- (b) Using a screwdriver, detach the 3 clips. HINT:

Tape the screwdriver tip before use.


(c) Disconnect the connectors and remove the air conditioning control.

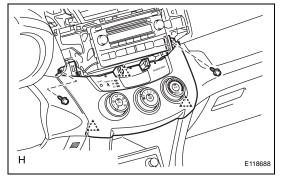

#### 6. REMOVE AIR MIX CONTROL SWITCH


(a) Detach the 2 claws and remove the air mix control switch.




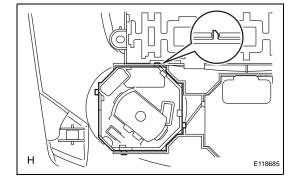

#### 7. REMOVE BLOWER CONTROL SWITCH

(a) Detach the 2 claws and remove the blower control switch.

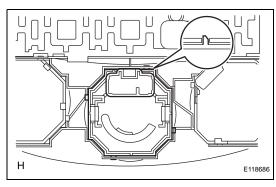

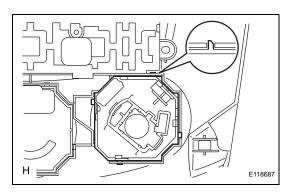

## 8. REMOVE AIR VENT MODE CONTROL SWITCH

(a) Detach the 2 claws and remove the mode control switch.

## **INSTALLATION**

- 1. INSTALL AIR VENT MODE CONTROL SWITCH
  - (a) Attach the 2 claws to install the mode control switch.
- 2. INSTALL BLOWER CONTROL SWITCH
  - (a) Attach the 2 claws to install the blower control switch.
- 3. INSTALL AIR MIX CONTROL SWITCH
  - (a) Attach the 2 claws to install the air mix control switch.



- (a) Connect the connectors.
- (b) Attach the 3 clips to install the air conditioning control.
- (c) Install the 2 screws.
- 5. INSTALL RADIO RECEIVER ASSEMBLY (w/ Radio Receiver) (See page IP-10)
- 6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-10)
- 7. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER (See page IP-10)
- 8. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
- 9. CHECK SRS WARNING LIGHT
  - (a) Check the SRS warning light (see page RS-37).

